


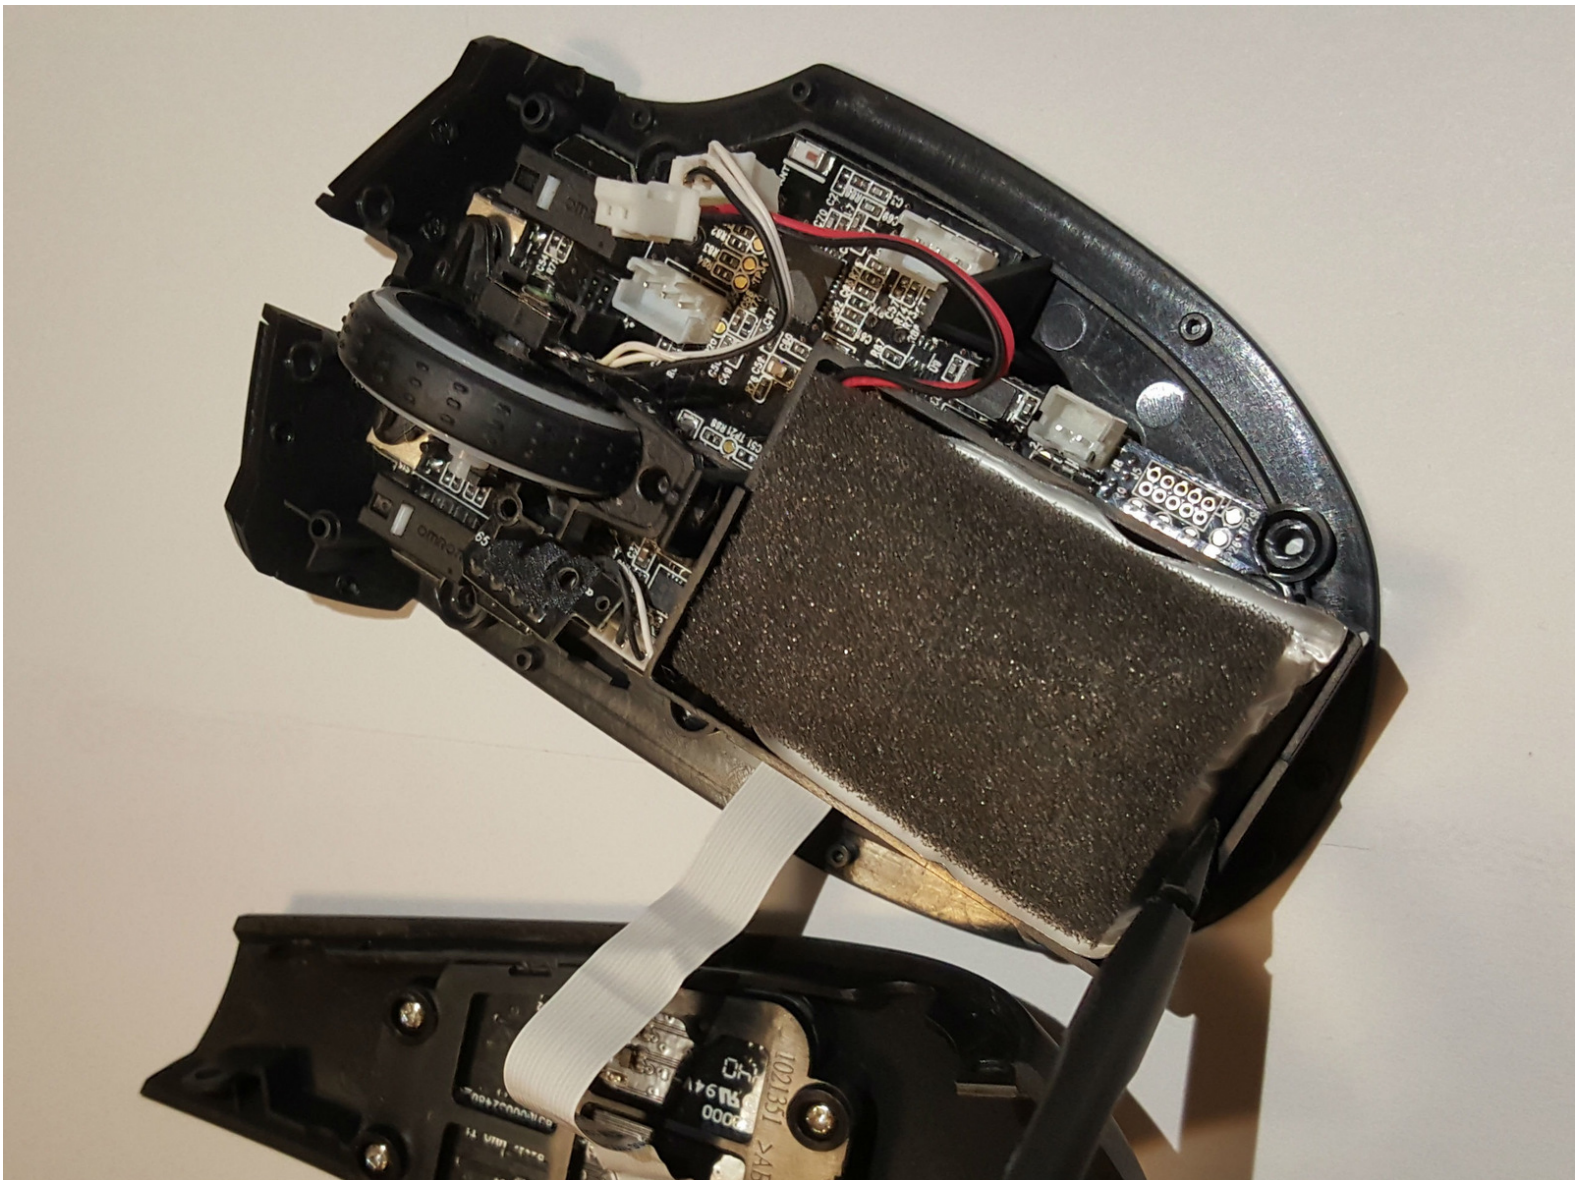

Razer Naga Epic Chroma Battery Replacement

This guide will show how to replace the battery in the Razer Naga Epic Chroma.

Written By: Jordan Morgan






TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Razer Naga Epic Chroma Disassembly

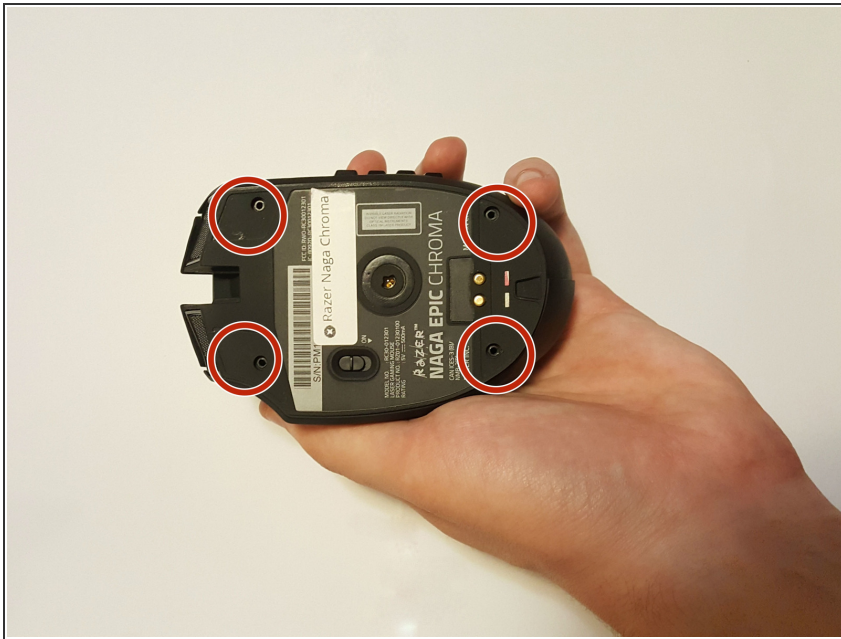


- Remove the teflon tape from the bottom of the mouse with a spudger.

Step 2




- Remove the four screws with the Phillips head #00 screwdriver.

Step 3

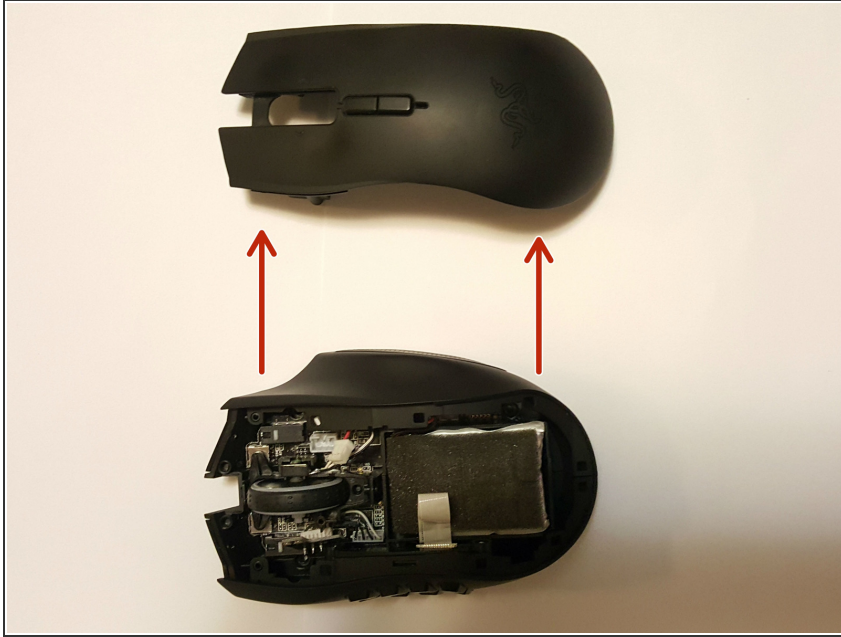


- Gently pull on the top plastic plate of the device and carefully unplug the white cord from the circuit board.

Step 4

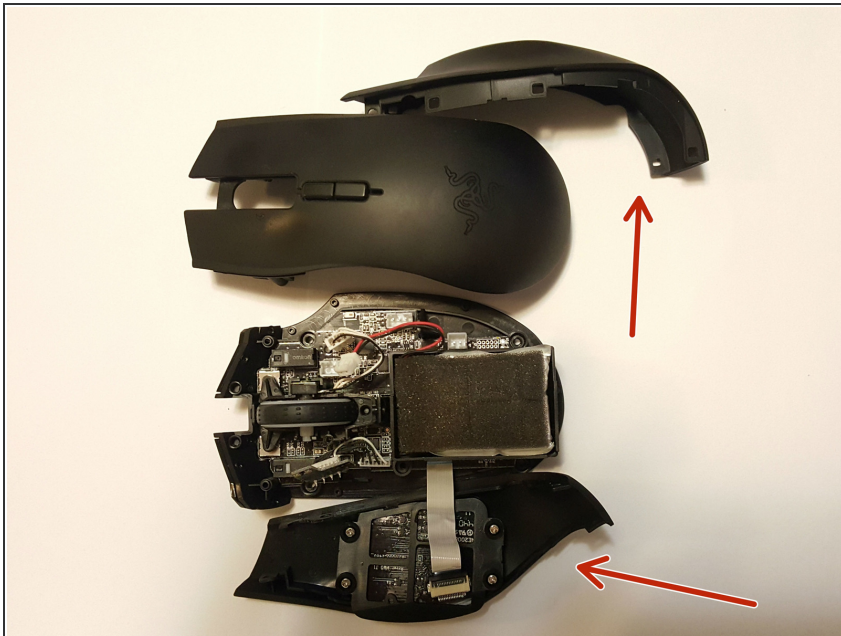


- Gently pull up on the two side plastic plates.

Step 5 — Battery

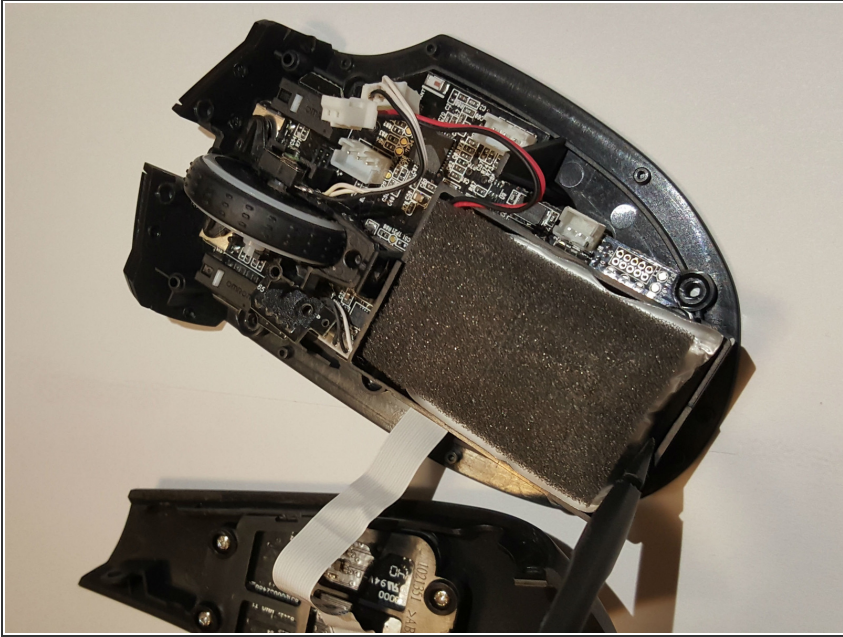


- Take a plastic spudger and gently pry the battery pack from the device.

Step 6

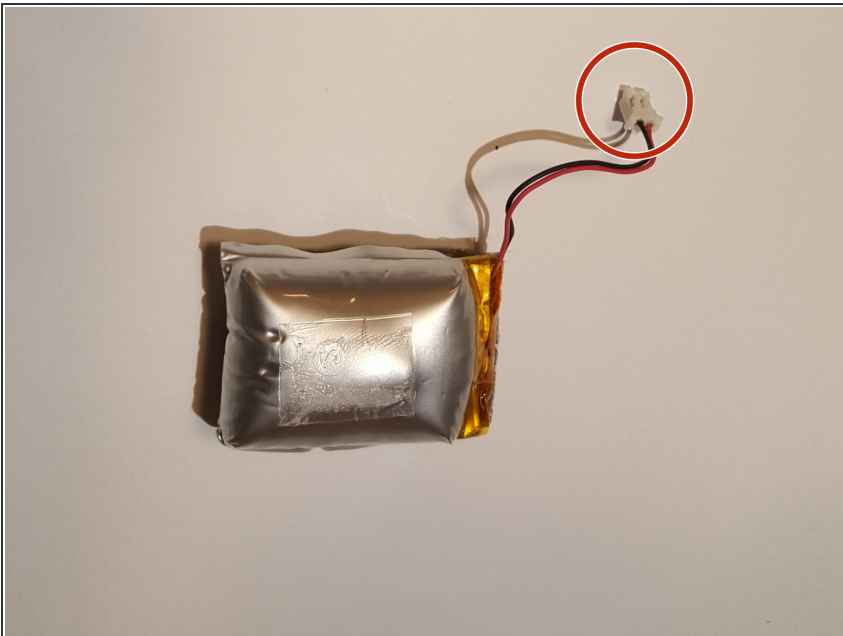

- Unplug the power cord from the circuit board.

Step 7

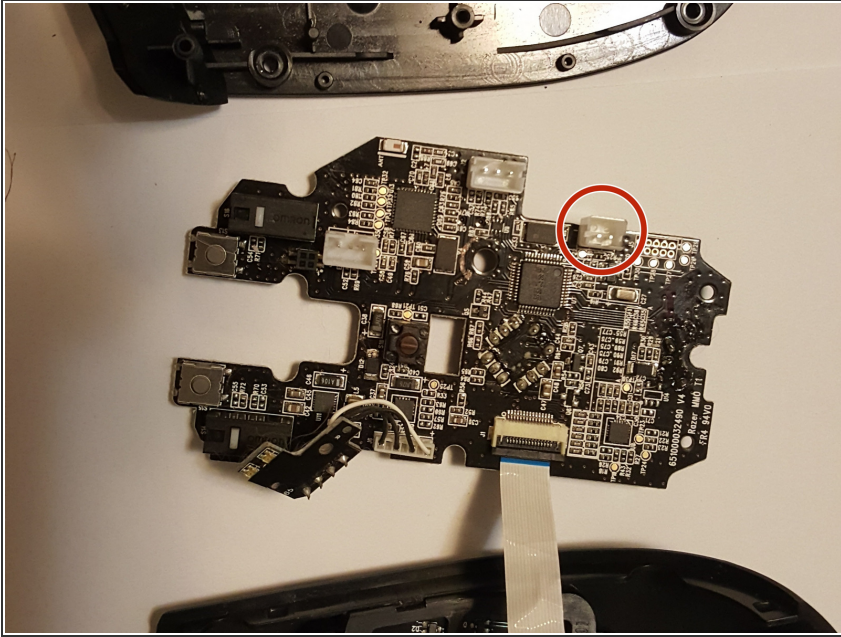

- Plug the cord of the new battery into the socket on the bottom right of the circuit board.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-25 09:24:12 AM.